



1	2	3	4	5	6	7	8	9	10		
3 A	7.5 A	15 A	20 A								
Fuse 1 (128 - 143) Generale UTILIZZI General AUX - Brake	Fuse 2 (120 - 103) PTO PTO	Fuse 3 (036 - 034) Attuatore RPM Actuator Engine speed	Fuse 4 (136 - 134)	Fuse 5 (035 - 033) Attuat Alt. TAGLIO Actuator CUT HEIGHT	Fuse 6 (135 - 133)	Fuse 7 (104 - 104) Relais Buzzer Relais Buzzer	Fuse 8 (130 - 132) Alternatore 12V ALTERNATOR 12V	Fuse 9 (129 - 131)	Fuse 10 (120 - 103) Alimentaz. Radio Radio control Receiver	Fuse 11 (128 - x)	Fuse 12 (128 - 138) Utilizzi AUX AUX

A STOP (120 - 120-R) (122 - 000)	B Aux (138 - 140) (141 - 00)	C Buzzer (120 - 104) (121 - 00)
D STOP (000 - 015) (122 - 000)	E START (120 - 109) (123 - 00)	F PTO (120 - 126) (124 - 00)

- PIN 1 Buzzer Key ON / Cicalino chiave sul quadro
- PIN 2 Safety Switch Drive / Fuori centro Analogica
- PIN 3 & 4 Gas actuator / Attuatore RPM
- PIN 5 & 6 Cut high adjustment / Attuatore SOLLEVATORE
- PIN 7 & 8 Drive speed & steering / Avanzamento e direzione
- PIN 9 Relais AUX
- PIN 10 Relais PTO
- PIN 11 -
- PIN 12 e 13 Auxiliary actuator / Attuatore AUX
- PIN 14 Relais STARTER
- PIN 15 + 12 V (signal rpm)
- PIN 16 Micro "CHOKE"
- PIN 17 Fuel Reserve / Spia RISERVA CARB. (+)
- PIN 18 Relais Engine STOP / Relais Stop MOTORE